
1- Measure drivway outside edge to outside edge.

2- add 6 inches to each side for clearance of gates when fully opened to get your inside of post to inside of post measurment.

3- Say your driveway is 14feet 6 inches your new mesurment for inside of post to inside of post would be 15feet 6 inches

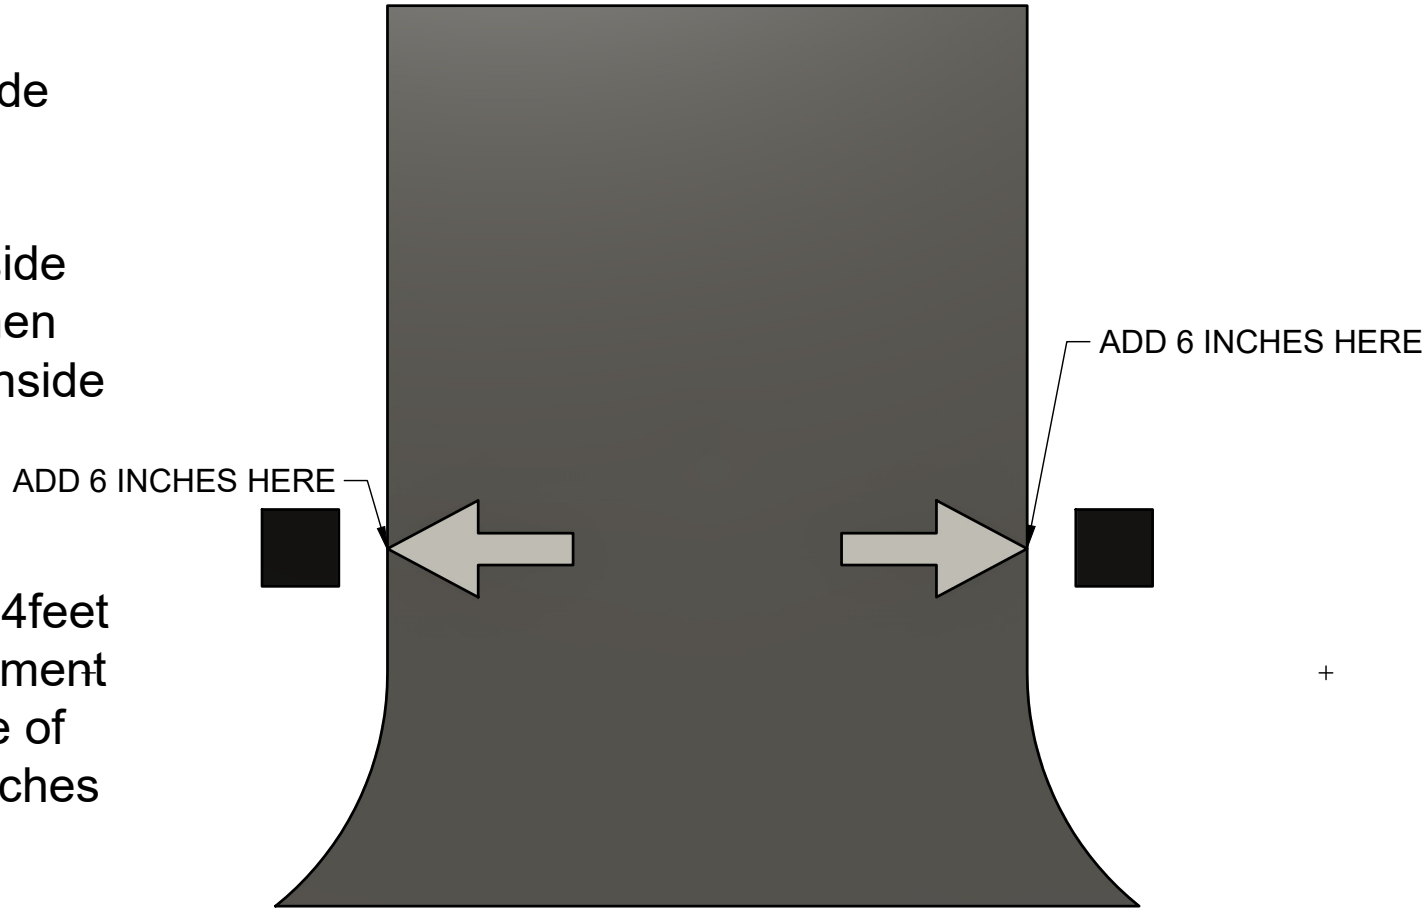

NC CUSTOM GATE

PROJECT
NC CUSTOM GATE

TITLE
HOW TO MEASURE FOR POST

APPROVED	SIZE	CODE	DWG NO	REV
CHECKED	A			
DRAWN Oliver Swanson 1/30/2026	SCALE 1:15	WEIGHT		SHEET 1/1